

DOOR: FULLY REVERSIBLE AFTER INSTALLATION

The 1/2" jamb spacer ensures that the 3/4" gap at the bottom of the door is maintained when the jamb is turned upside down to reverse the swing from swinging in to swinging out. Exchanging the hinge and latch jambs changes the swing from LH to RH

These pins can be pulled after the wall is installed by removing the top valance infill panel above the door. Removing the pins releases the jambs. The door swing can be changed from LH to RH and swinging in to swinging out.

